


Resene colour charts are updated regularly. This colour chart file is part of the colour chart archive, which we provide so you can view Resene colours that have been available over the years. Most older colours can still be tinted – check with your Resene ColorShop team if you need an older colour for your project.

To view the latest Resene colour charts, visit [www.resene.com/colour-charts](http://www.resene.com/colour-charts)

# Resene colorwood INTERIOR WOOD STAIN



Coloured timber with the see through look

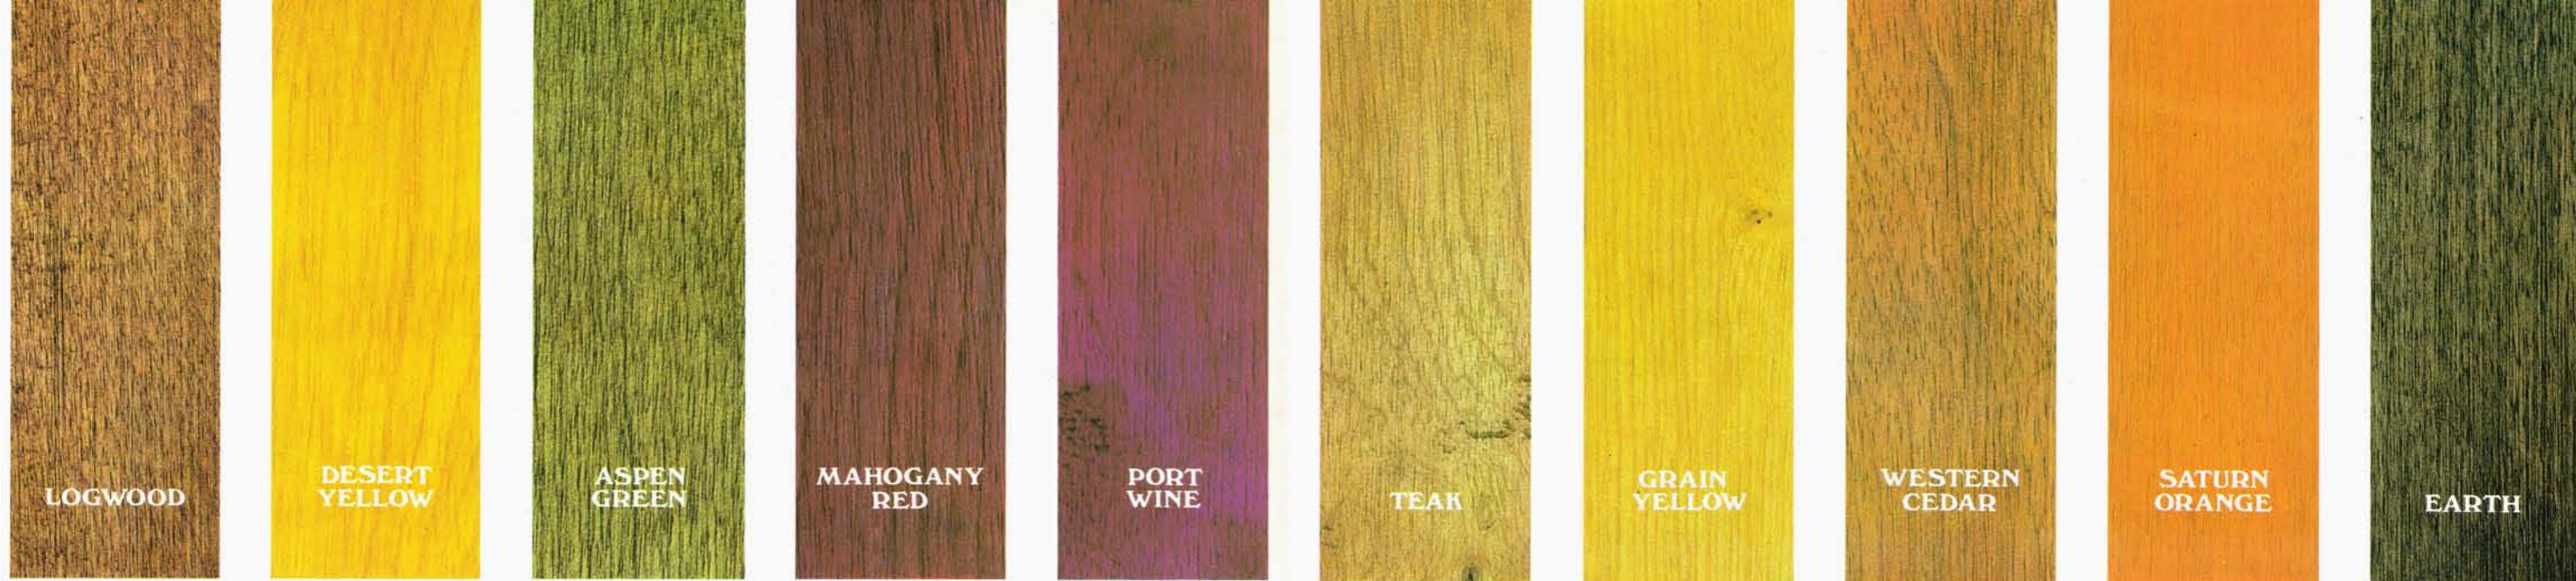


# Resene colorwood INTERIOR WOOD STAIN

RESENE COLORWOOD is the new, exciting way of treating natural timbers and enhancing the grain. COLORWOOD gives you coloured timbers with the see-through look. COLORWOOD is available in these 20 fabulous shades, which are suitable for all native and imported timbers. The colours shown on this chart are on New Zealand Tawa. Colours can be intermixed to give a much wider range of colours.



COLOURS SHOWN ON THIS CHART ARE AS CLOSE AS MODERN PRINTING WILL ALLOW. FOR MORE ACCURATE MATCH, SEE TIMBER SAMPLES.

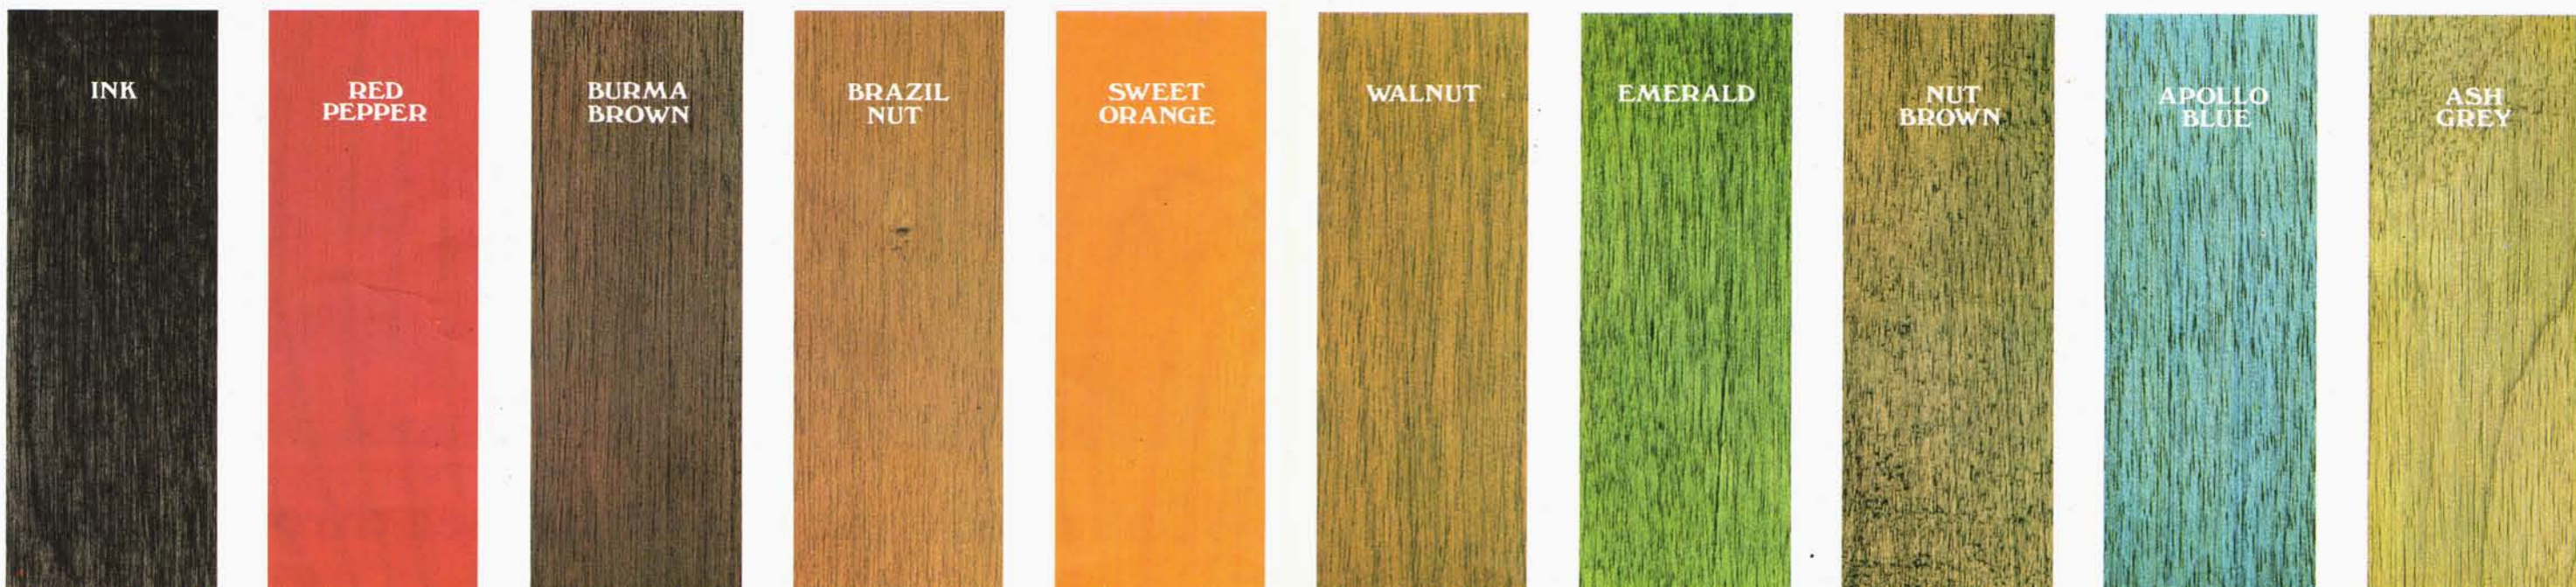



It is important that COLORWOOD is tested on a timber off-cut or section of the job that is not seen, to ensure that it is the desired finish, as the finished colour is influenced by the colour of the timber itself.

If the colour is too strong, reduce with Colorwood Reducing Thinner.

It should be noted when using light-and-bright colours, best results are obtained by using pale-coloured timbers. Dark timbers may show darker than the required finish.

**DIRECTIONS:**

Ensure surface is well sanded with fine paper and dust down.

- (1) Putty all nail holes:-  
Mix a little of the Colorwood in the required colour with linseed oil putty.

- (2) Apply Colorwood by brush or cloth. Brush well into surface or, if using a cloth, apply generously rubbing in with a circular motion.

The colour strength is also determined by the time the stain is left before the excess is wiped. This will vary between dense and absorbent timbers. The stain can be left for 3 minutes for a pale shade, and up to 10 to 15 minutes for full-strength colour.


Wipe excess with dry cloth along the grain.

- (3) Allow 12 hours dry time before re-coating with Colorwood Polyurethane topcoat. Allow 5 hours to dry.
- (4) Sand down with fine paper and apply final coat Colorwood topcoat.

Colorwood Polyurethane top-coats are available in Poly-Satin, Poly-Gloss and Poly-Flat. Colorwood is available in four and one litre cans as well as 250 ml. Colorwood covers approx. 16 square metres per litre.

Ensure that only Poly-Flat, Poly-Satin or Poly-Gloss are used over Colorwood.

# Resene colorwood



## INTERIOR WOOD STAIN

**Resene Paints Limited**

GOUGH STREET, LOWER HUTT. P.O. BOX 36-006. PHONE 684-319. TELEGRAMS "RESENE".  
BRANCHES: AUCKLAND, HAMILTON, HASTINGS, NAPIER, CHRISTCHURCH, DUNEDIN.