

DIY



# WINDOW DISPLAY

It's easy to transform an old wooden window frame into a nifty display for potted plants by following our simple step-by-step guide.

WORDS & PHOTOS **MARK RAYNER**


BROUGHT TO YOU BY



the paint the professionals use

## You will need

- 45mm exterior screws
  - Clean cloth
- Exterior plywood
- Old wooden window frame with glass removed
  - Paintbrushes
  - Pencil
- 4 x plastic pot hangers
  - Resene Lustacryl tinted to Resene Alabaster
  - Resene Lustacryl tinted to Resene Parsley
- Resene Lustacryl tinted to Resene Poppy
  - Resene Quick Dry
  - Resene Aquapel & Terracotta Sealer
    - Sandpaper
    - Saw
  - Screwdriver
  - Tape measure
- 4 x terracotta pots

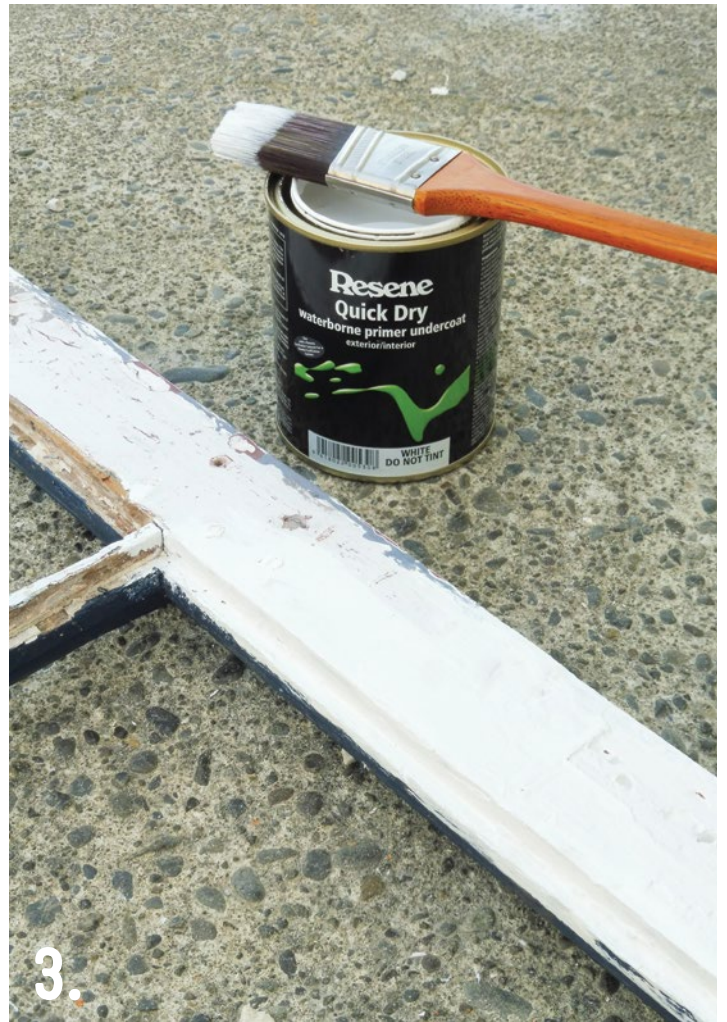

## To get the look

Mark painted the background shed wall with Resene Lumbersider tinted to Resene Soft Apple.



### STEP ONE

Sand the window frame and then wipe off any sanding residue with a clean cloth.

### STEP TWO

Cut a piece of plywood to the same size as the window frame and smooth any rough edges with sandpaper.

### STEP THREE

Spot prime any areas of bare wood on the window frame with Resene Quick Dry and allow to dry.

### STEP FOUR

Apply one coat of Resene Quick Dry to the piece of plywood and allow to dry.

### STEP FIVE

Apply one coat of Resene Aquapel & Terracotta Sealer to the inside and outside of each terracotta pot and allow to dry.

### STEP SIX

Apply two coats of Resene Lustacryl tinted to Resene Alabaster to the window frame, allowing two hours for each coat to dry.



**STEP SEVEN**

Apply two coats of Resene Lustacryl tinted to Resene Parsley to one side of the piece of plywood, allowing two hours for each coat to dry.

**STEP EIGHT**

Apply two coats of Resene Lustacryl tinted to Resene Poppy to the terracotta pots, allowing two hours for each coat to dry.

**STEP NINE**

Fix the piece of plywood to the back of the window frame, as shown, using 45mm exterior screws.

**STEP TEN**

Apply two coats of Resene Lustacryl tinted to Resene Alabaster to the back and edges of the piece of plywood, allowing two hours for each coat to dry.

**STEP ELEVEN**

Fix the window display to a wall or fence using 45mm exterior screws.

**STEP TWELVE**

Fix the four plastic pot hangers into position using 45mm exterior screws.



the paint the professionals use

For more on paints and stains phone 0800 RESENE (0800 737 363) or visit your Resene ColorShop or [www.resene.co.nz](http://www.resene.co.nz)