

It's easy to smarten up an old wooden mirror frame using Resene Danska Teak Oil.

★★★ Difficulty level ★ easy ★★ moderate ★★★ challenging

Ways with wood with Mark Rayner – 87

You will need:

- Clean cloths
- Mirror in a wooden frame
- Paint stirrer
- Paintbrush
- Resene Danska Teak Oil
- Rubber gloves
- Sandpaper
- Scissors
- Screwdriver
- String
- Small eye hooks (x2)



Step one
Remove the mirror and backing board from the wooden frame.




Step two
Carefully sand the wooden frame, rubbing in the direction of the grain.



Step three
Wipe off any sanding residue with a clean cloth.



Step four
Carefully stir the Resene Danska Teak Oil.

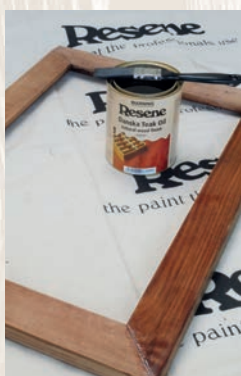

Step five
Apply one coat of Resene Danska Teak Oil to the wooden frame, brushing in the direction of the grain.



Step six
Wearing rubber gloves, wipe off any excess Resene Danska Teak Oil with a clean cloth and allow to dry.




Step seven
Replace the mirror and backing board back into the wooden frame.



Step eight
Attach two eye hooks to the back of the frame and thread with string to form a hanging device.



To get the look:
Mark painted the background wall with Resene SpaceCote Flat tinted to Resene Black White.

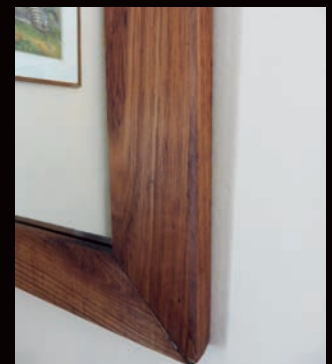

Other ideas:
To change the colour of the wood simply stain the frame with any colour from the Resene Colorwood range and finish off with Resene Aquaclear.

For more ideas and inspiration visit your local Resene ColorShop or www.resene.com/colorshops.

Check out more project ideas online www.resene.com/projects.