

★★★ Difficulty level ★ easy ★★ moderate ★★★ challenging

Ways with wood  
with Mark Rayner – 88

### You will need:

- 75mm exterior screws
- Mineral turpentine
- Paint stirrer
- Paintbrush
- Pencil
- Resene Paint Pot
- Resene Woodsman wood oil stain tinted to Resene Totem Pole
- Sandpaper
- Saw
- Screwdriver
- Set square
- Tape measure
- Tongue and groove landscaping timber (approx 14m)



#### Step one

Measure, mark and cut fourteen lengths of landscaping timber, each measuring one metre. Smooth any rough edges with sandpaper.



#### Step two

Assemble four of these lengths of timber to form a rectangular frame, as shown, using a set square to ensure corners are at ninety degrees. Fix together with 75mm screws.



#### Step three

Place four more lengths of timber on top of the first frame, as shown, to create a second layer. Again, fix together with 75mm screws.



#### Step four

Place the six remaining lengths of timber across the base, as shown. Once again, fix with 75mm screws.




#### Step five

Carefully stir the Resene Woodsman wood oil stain tinted to Resene Totem Pole.



#### Step six

Apply one coat of Resene Woodsman wood oil stain tinted to Resene Totem Pole to the garden seat and allow 24 hours to dry.

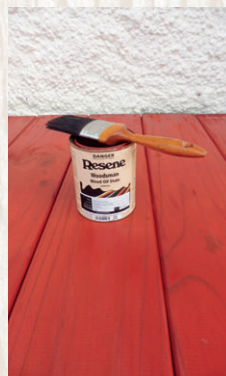

#### Step seven

Apply a second coat of Resene Woodsman wood oil stain tinted to Resene Totem Pole to the garden seat and allow 24 hours to dry.



#### Step eight

Wash brush in mineral turpentine.



**To get the look:**  
Mark painted the background wall with Resene AquaShield tinted to Resene Quarter Dutch White.



**Other ideas:**  
For a rich green effect stain the garden seat with Resene Woodsman wood oil stain tinted to Resene Rangitoto.

For more ideas and inspiration visit your local Resene ColorShop or [www.resene.com/colorshops](http://www.resene.com/colorshops).

Check out more project ideas online [www.resene.com/projects](http://www.resene.com/projects).