



★★★ Difficulty level ★ easy ★★ moderate ★★★ challenging

Ways with wood
with Mark Rayner – 94

You will need:

- Clean dry cloths
- Paint stirrers
- Paintbrushes
- Plywood interior (ours was the interior of an old garden house)
- Resene Aquaclear satin
- Resene Colorwood tinted to Resene Meranti
- Rubber gloves
- Sandpaper



Step 1
Sand the old plywood surfaces with sandpaper.



Step 2
Wipe off any sanding residue with a clean dry cloth.



Step 3
Carefully stir the Resene Colorwood tinted to Resene Meranti.



Step 4
Working on one plywood panel at a time, apply one coat of Resene Colorwood tinted to Resene Meranti, brushing in the direction of the grain.



Step 5
Allow the Resene Colorwood tinted to Resene Meranti to penetrate the plywood panel for a few minutes before rubbing off the excess with a clean dry cloth. Continue until all the plywood panels are stained to same depth of colour. Allow to dry.



Step 6
Carefully stir the Resene Aquaclear satin.



Step 7
Apply one coat of Resene Aquaclear satin to the plywood panels, brushing in the direction of the grain. Allow two hours to dry.




Step 8
Apply two more coats of Resene Aquaclear satin to the plywood panels, brushing in the direction of the grain and, once again, allow two hours for each coat to dry.

Transform a tired old plywood interior into a thing of beauty with a little bit of help from Resene.



To get the look: Mark painted the interior side of the metal roof with Resene Lustacryl tinted to Resene Sponge.

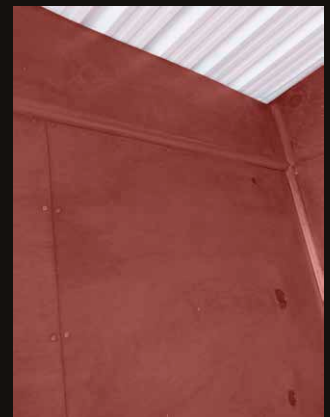

Other ideas:
For a rich red effect, stain the plywood with Resene Colorwood tinted to Resene Japanese Maple.

For more ideas and inspiration visit your local Resene ColorShop or www.resene.com/colorshops.

Check out more project ideas online www.resene.com/projects.